

It is the best for everyday check of a torque wrench.

Torque wrench tester **DWT-200**

A torque tester special maker sends to you by the simple specification.



Measurement of the torque which actually started is here.
PP (peak operation mode)
 On physical feeling training and bolting operation check of a worker

Measurement of click operation of a torque wrench is here.
PD (peak down mode)
 On the tool check at the time of the commencement of work

**The check of torque of operation is made in easy operation.
 An LED type with a legible display**

Measuring method (in the case of a torque wrench operation torque check)

- (1) Fix Tester Firmly.
- (2) Switch on Power Source and Check Measurement Mode PD (Slide Switch).
- (3) Display "0" Check (when it is not Zero, Mode is Set to "TR" and CLEAR is Recommended Highly)
- (4) Insert Wrench in Detecting Element.
- (5) Bind Tight at a Stretch until Clutch Operates (it Does Not Rest on the Way).
- (6) Read Torque Display.

Specification

Form	DWT-200
Measuring range	7.0~200.0 N·m
Accuracy	±0.5% (499 or less digit)±3digit
The measurement direction	CW (right)
Measurement mode	Track and P-P (peak hold) P-D (peak down hold)
Auto-power-off	When not operating it for 5 minutes, it is power-source automatic OFF.
A power source and use time	Size AA battery Four Continuous duty About 20 hours (at the time of Alkaline battery use)
Detecting-element form	□12.7
Outside size · Weight	200(W) × 120(D) × 96(H) · About 2.6kg
Accessories	Angle drive adapter (□9.5 l- □12.7)
	An inspection report, a proofreading certificate, a traceability system figure

* About a data output, I correspond as an option.

At the time of spanner type torque wrench measurement, a hexagon-like adapter is required separately. (option)

* Click operation of a torque wrench, and actual torque

If a torque wrench becomes the set-up torque, torque will fall according to internal machine structure for a moment, and it will be transmitted at hand as a feeling of a click.


However, if load is made to open completely at this time (idling), since it is very dangerous, if after click operation applies load, torque will start as it is.

By the method of application, bigger torque than setting torque may start as a result.

At this tester, the check of the torque of a wrench of operation is detected by PD (peak down mode).

The torque which starts at the time of actual bolting can be checked in PP (peak operation mode).

You can use also for a check and training of bolting operation of each worker.

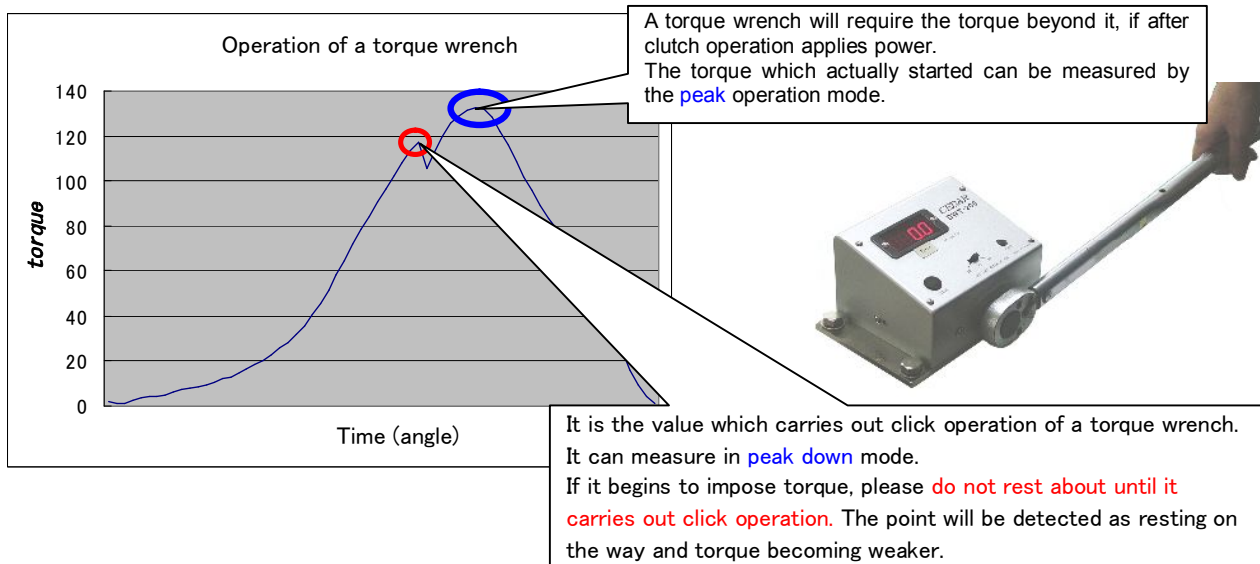

Please check the newest information and the details
of each product in a homepage. 《URL <http://www.cedar.co.jp>》

SHRADDHA IMPEX
Authorized Distributor

Email: shraddhaimpex@gmail.com / sales@shraddhaimpex.net
Web: www.shraddhaimpex.net
Contact: +91 9819530352 / +91 8591279918

The contents of a catalog may change specification and a design without a preliminary announcement.